


No	Part Name	No	Part Name	No	Part Name
1	Bezel_Chip	11	Hinge	21	<u>Invertor Board</u>
2	webcam-glass	12	Hinge cover	22	Shield_invertor
3	Bezel_Chip	13	Stand_top	23	Screw (invertor board/mainboard)
4	web_camera	14	Stand_down	24	Screw (bezel/shield)
5	<u>Panel (lamps)</u>	15	Base_glass	25	Screw (hinge/stand)
6	<u>Mainboard</u>	16	Base_backet	26	Screw (hinge/rearcover)
7	shield_mainboard	17	rubber foot	27	Screw (base_bracket/stand)
8	Speaker	18	power button	28	Screw (base/hinge)
9	Bezel-insert	19	power lens	29	Screw (web-cam/bezel
10	Rear cover	20	Key_funtion		

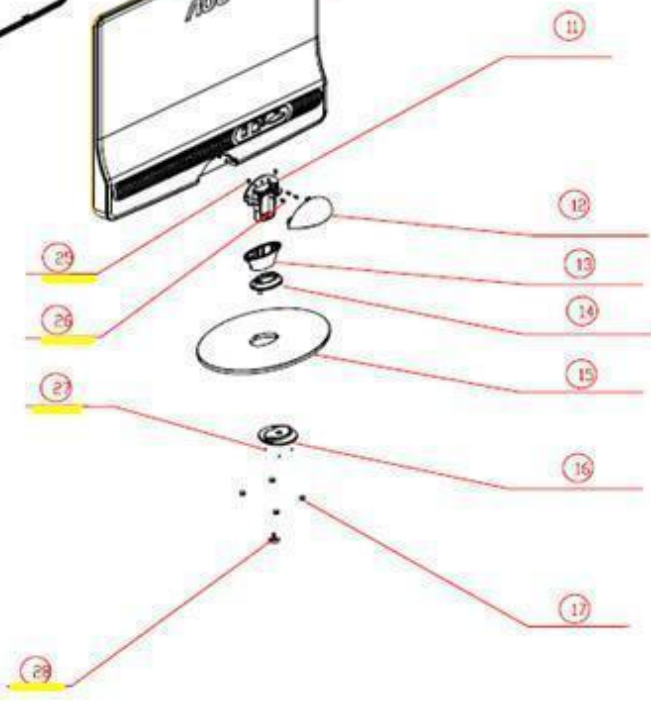

Disassembly instructions For AOC monitor V17

- **List of components containing hazardous materials**

- printed circuit boards (Surface greater than 10 square centimeters) as shown on above illustration item 6 & 21.

- mercury containing components, such as backlighting lamps, as shown on above illustration item 5.

- **List of tools to disassemble the monitor and remove components containing hazardous materials**

- Cross screwdriver